



## 8. Remote Control Battery Change

### 8.1 Battery Removal


- a. Release the lid by safely inserting a small tool into the notch (1), and press the lid clasp (2).

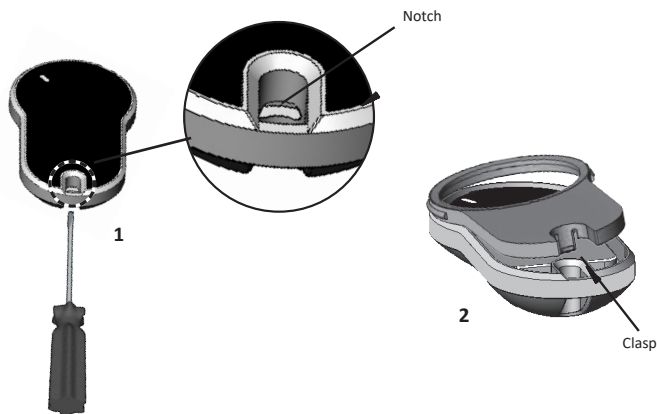

- b. Take out the push button and intermediate part.


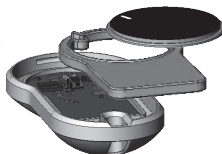


- c. Take out the electronic board with the battery and remove battery.

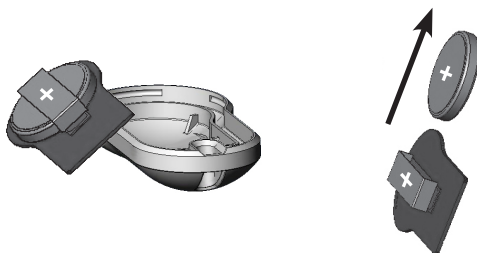


## 8.2 Battery Insertion

- Insert new battery (CR2032) into the electronic board according to the "+" "-" signs (1).
- Insert the electronic board into the remote control's housing (2).

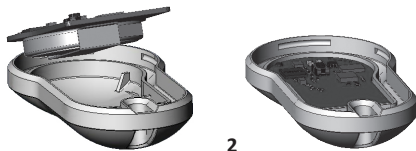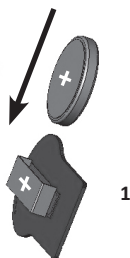

- Reassemble the intermediate part and the push button and place over the electronic board.

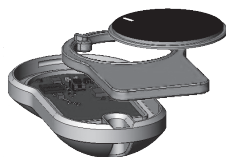

- Place the lid and press until the clasp clicks into place.

