



3.3 Pairing Remote Control





 


3

Touch screen with palm or fingers for 3 seconds to active.



Numeric buttons illuminated. Type [PIN Code] III [#] Numeric buttons blinking.







4

Press the remote control button.

Press [1] to add remote control. Illuminated buttons turn off. [OK] indication blinks for 15 seconds waiting for remote control unit.





Remote control button





Pairing OK

[OK] indication blinks once. 2 short beeps emitted. Remote control unit added.



Pairing failed


[OK] indication blinks for 15 seconds. No beeps emitted, Start the process from step 1

Notes:

- To add more remote control units, repeat this pairing process.
- · A remote control unit can be paired with one door unit only.
- It is possible to add up to 20 remote control units to a single door.
- Only an authorized dealer can reset a paired remote.

3.4 Deleting Remote Control

The deleting remote control process' will delete <u>all</u> remote control units including Touchpad and Fingerprint readers defined within the system.

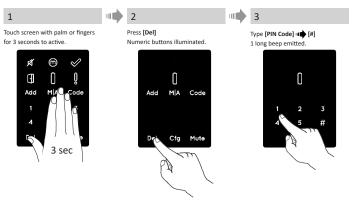



8. Remote Control Battery Change

8.1 Battery Removal

a. Release the lid by safely inserting a small tool into the notch (1), and press the lid clasp (2).



c. Take out the electronic board with the battery and remove battery.







8.2 Battery Insertion

- a. Insert new battery (CR2032) into the electronic board according to the "+" "-" signs (1).
- b. Insert the electronic board into the remote control's housing (2).



 Reassemble the intermediate part and the push button and place over the electronic board.



d. Place the lid and press until the clasp clicks into place.

