


## 9. Sabbath Mode

Auto-locking and hazard beeps after knob operation are disabled. Battery indication LED blinks every 20 seconds.


1

Touch screen with palm or fingers for 3 seconds to activate.

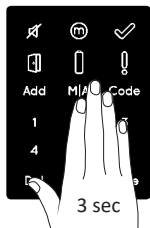


2

Press [Cfg]

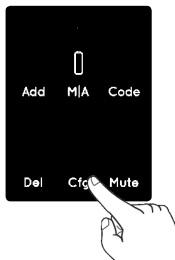


3

Numeric buttons illuminated. Type [PIN Code] → [#], Numeric buttons blinking.

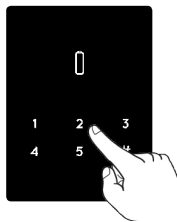

4

Press [5] to toggle between activation and deactivation of the Sabbath mode.

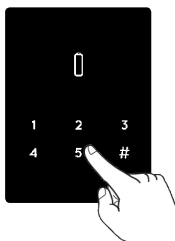

Sabbath mode  
activated



Sabbath mode  
deactivated

