Decorative Dress Spacer


The Decorative Dress Spacer is assembled between the door and the ENTR[™] door unit.


Decorative Dress Spacers are available in 3 options:


- 1. Designed for 2-7 mm of space
- 2. Designed for 9-13 mm of space
- 3. Designed for 14-19 mm of space

Assembly instructions:

- 1. Measure cylinder protrusion (L) from door surface (Fig 1):
 - For cylinder protrusion of 2-7 mm use option 1
 - For cylinder protrusion of 9-13 mm use option 2
 - For cylinder protrusion of 14-19 mm use option 3
- 2. Remove door unit
- 3. Remove inner cover/rosette
- Assemble the Decorative Dress Spacer matching the space measured. In order to adjust the spacers to the correct space required (options 2 or 3) break the matching projecting part in the spacer.

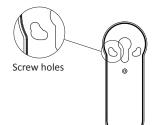



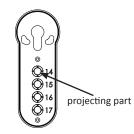


7 mm spacer For 2-7 mm space


13 mm spacer For 9-13 mm space

19 mm spacer For 14-19 mm space

- Attach the Decorative Dress Spacer to the door using screws or use a double sided glue.
- Screw holes in the Decorative Dress Spacer are located according to various DIN standards (see illustration).

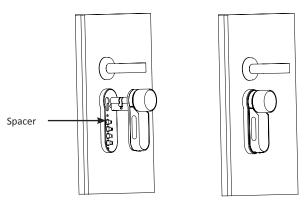

The Mul-T-Lock name and the muscleman logo, in the field of locking products, and any other name, mark or logo used by Mul-T-Lock and marked by ® or ™ sign, are registered/pending trademarks of Mul-T-Lock Ltd. in various countries. Mul-T-Lock reserves the right to make any product improvements or modifications without prior notice. ©2015 Mul-T-Lock Technologies Ltd

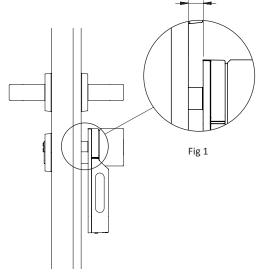

FNTE